

N2024/N20230, N3424/N34230

NON-SPRING RETURN DIRECT-COUPLED DAMPER ACTUATORS FOR FLOATING / 2-POSITION CONTROL

PRODUCT DATA



GENERAL

These direct-coupled damper actuators provide two-position and floating control for:

- air dampers,
- VAV units,
- air handlers,
- ventilation flaps,
- louvers, and
- reliable control for air damper applications with up to 4.6 m² / 50 sq.ft. (20 Nm / 177 lb-in) or 7.8 m² / 85 sq. ft. (34 Nm / 300 lb-in) (seal-less dampers; air friction-dependent).

FEATURES

- Self-centering shaft adapter
- Access cover to facilitate connectivity
- Service/off for safe and easy servicing
- Rotation direction selectable by switch
- Declutch for manual adjustment
- Mechanical end limits
- Field-installable auxiliary switches (optional)
- Mountable in any orientation (no IP54 if upside down)
- Mechanical position indicator
- CE and UL-certified (230V models with CE, only)

SPECIFICATIONS

Supply voltage

N2024/N3424	24 Vac/dc ±15%, 50/60 Hz
N20230/N34230	230 Vac ±15%, 50/60 Hz

Nominal voltage

N2024/N3424	24 Vac/dc, 50/60 Hz
N20230/N34230	230 Vac, 50/60 Hz

All values stated hereinafter apply to operation under nominal voltage conditions.

Power consumption

N2024	6 VA / 3 W
N20230	8 VA / 3 W
N3424	6 VA / 3 W
N34230	10 VA / 4 W

Ambient limits

Ambient operating limits	-20...+60 °C (-5...+140 °F)
Ambient storage limits	-40...+80 °C (-40...+175 °F)
Relative humidity	5...95%, non-condensing

Safety

Protection standard	IP54 as per EN 60529
Protection class	II as per EN 60730-1
Overvoltage category	III

Lifetime

Full strokes	60000
Repositions	1.5 million

Mounting

Round damper shaft	10...27 mm (3/8...1-1/16")
Square damper shaft	10...18 mm (3/8...11/16"); 45° steps
Shaft length	min. 22 mm (7/8")

Internal end switches (when included)

Rating	5 A (resistive) / 3 A (inductive)
Triggering points	5° / 85°

Torque rating

N2024 / N20230	20 Nm (177 lb-in)
N3424 / N34230	34 Nm (300 lb-in)

Runtime

95 sec (60 Hz) / 110 sec (50 Hz or DC supply)

Rotation stroke

95° ± 3°

Dimensions

see "Dimensions" on pg. 6

Weight (without cables)

1.35 kg (3 lbs.)

Noise rating

40 dBA max. at 1 m

CE Certification

N2024, N3424, N20230, N34230

UL Certification

N2024 / N3424

MODELS

order number	supply voltage	internal end switches	power consumption	torque
N2024	24 Vac	--	6 VA / 6 W	20 Nm (177 lb-in)
N2024-SW2	24 Vac	2		
N20230	230 Vac	--	8 VA / 8 W	
N20230-SW2	230 Vac	2		
N3424	24 Vac	--	9 VA / 9 W	34 Nm (300 lb-in)
N34230	230 Vac	--	13 VA / 10 W	

Product Identification System

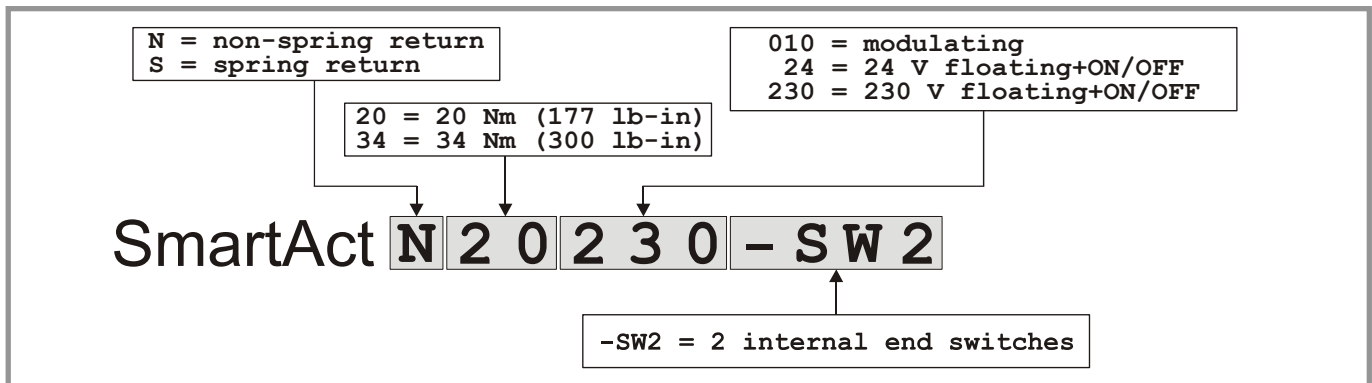


Fig. 1. Product Identification System

OPERATION / FUNCTIONS

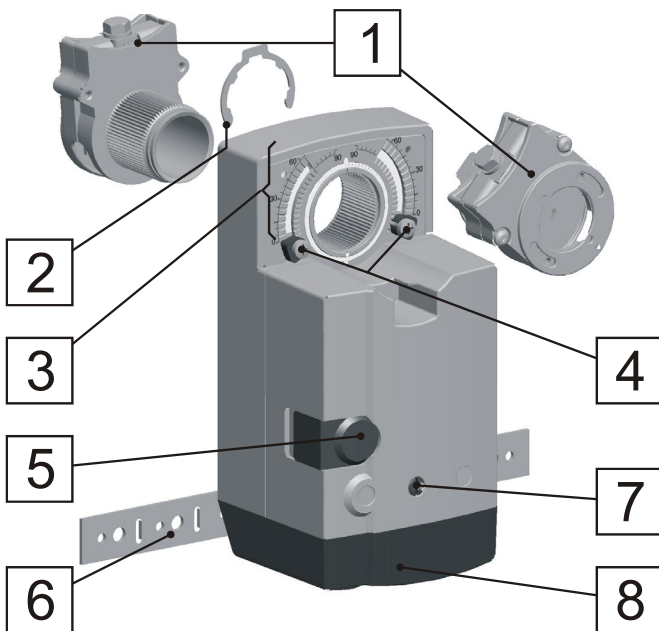


Fig. 2. Setting units and control elements

Legend for Fig. 2:

- 1 Self-centering shaft adapter
- 2 Retainer clip
- 3 Rotational angle scales (0...90° / 90...0°)
- 4 Mechanical end limits
- 5 Declutch button
- 6 Anti-rotation bracket
- 7 Function selection switch
- 8 Access cover

Contents of Package

The delivery package includes the actuator itself, parts 1 through 8 (see Fig. 2), the anti-rotation bracket screws, and the installation instructions.

RUN MODES

The function selection switch (see Fig. 3) can be used to place the actuator into any one of three different modes:

- Dir, floating/2-position control, CW run.
- Service/Off, actuator stop running.
- Rev, floating/2-position control, CCW run.

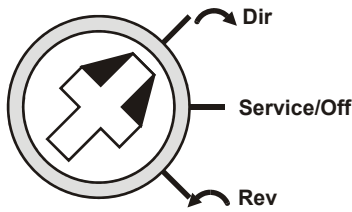


Fig. 3. Function selection switch

Power-Off Behavior

If power is removed, the actuator retains its position.

Service/Off

If the function selection switch is set to the "Service/Off" position, all rotary movement is cancelled, and all control signals are ignored, thus allowing the actuator to be safely manually operated.

Floating/2-Position Run Mode

If the function selection switch has been set to one of the two floating/2-position control settings (Dir or Rev) and the actuator is wired correspondingly (see A1 and A2 in section "Wiring Diagrams" on pg. 5), as soon as the operating power is applied, the actuator will run according to the power applied.

Table 1 describes the behavior (stops, rotates CCW, or rotates CW) of the N2024/N3424 in relation to the control signals (switch "open" or "24Vac/dc") applied to terminals 3 and 4, the function selection switch setting, and the manner in which the actuator is wired (either for floating mode – see A1 – or for 2-position mode – see A2 in section "Wiring Diagrams" on pg. 5).

Table 1. Behavior of N2024/N3424

wiring	control signal at		function selection switch		
	term. 3	term. 4	Dir	Service/Off	Rev
float.	open	open	stops	stops	stops
	open	24Vac/dc	CCW	stops	CW
	24Vac/dc	open	CW	stops	CCW
2-pos.	24Vac/dc	open	CW	stops	CCW
	24Vac/dc	24Vac/dc	CCW	stops	CW

Table 2 shows the same actuator behavior as Table 1, but for N20230/N34230 (230 Vac models).

Table 2. Behavior of N20230/N34230

wiring	control signal at		function selection switch		
	term. 3	term. 4	Dir	Service/Off	Rev
float.	open	open	stops	stops	stops
	open	230Vac	CCW	stops	CW
	230Vac	open	CW	stops	CCW
2-pos.	230Vac	open	CW	stops	CCW
	230Vac	230Vac	CCW	stops	CW

Sleep Mode

When the actuator reaches an end-stop or any obstacle blocking its running, it will automatically fall into the sleep mode. The actuator will then periodically start up and try to resume running, thus saving energy significantly through its whole service life.

Position Indication

The hub adapter indicates the rotation angle position by means of the rotational angle scales (0...90° / 90...0°) provided in the actuator plate (see Fig. 4).

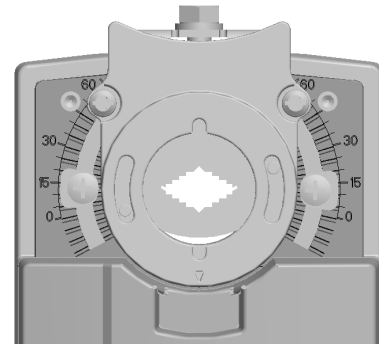


Fig. 4. Position indication

Manual Adjustment

⚠ IMPORTANT

To prevent equipment damage, you must remove power or set the function selection switch to the "Service/Off" position before manual adjustment.

After removing power or setting the function selection switch to the "Service/Off" position, the gear train can be disengaged using the declutch button, permitting the actuator shaft to be manually rotated to any position.

Limitation of Rotation Stroke

Two adjustable mechanical end limits (adjustable in 5° increments) are provided to limit the angle of rotation as desired (see Fig. 5).

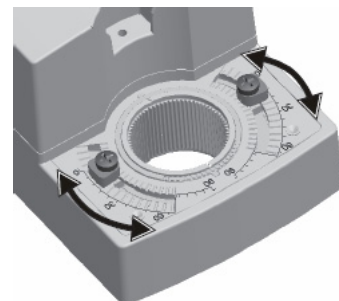


Fig. 5. Mechanical end limits

The mechanical end limits must be securely fastened in place. It is important that they properly mesh with the rotational angle scales when the screws are tightened.

Internal End Switches

NOTE: Applicable only to models equipped with internal end switches.

The internal end switches are set to switch from "common" to "normally open" at angles of 5° and 85°, respectively, from the totally counterclockwise position.

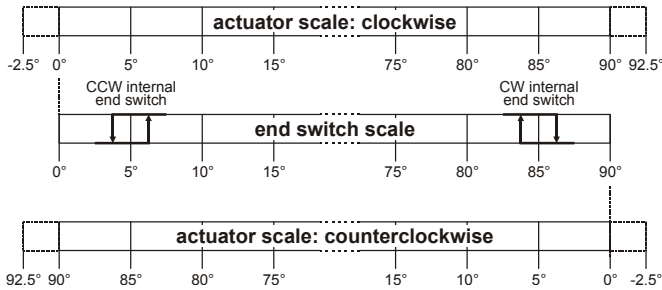


Fig. 6. Internal end switch triggering points

INSTALLATION

These actuators are designed for single-point mounting.

! IMPORTANT

In order to prevent equipment damage, you must remove power or set the function selection switch to the "Service/Off" position before manual operation.

Mounting Instructions

All information and steps are included in the installation instructions supplied with the actuator.

Mounting Position

The actuators can be mounted in any position (no IP54 if mounted upside down; see Fig. 7). Choose a mounting position permitting easy access to the actuator's cables and controls.

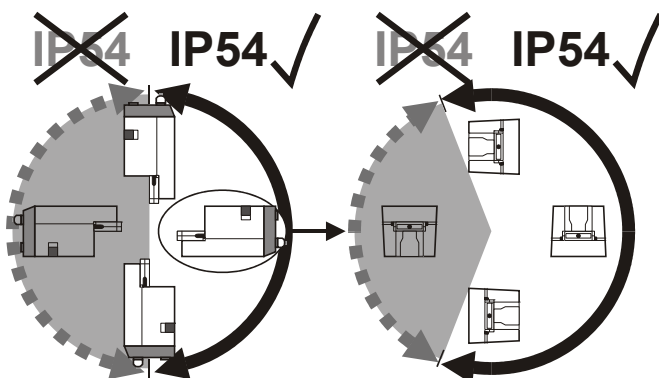


Fig. 7. Mounting for IP54

Mounting Bracket and Screws

If the actuator is to be mounted directly on a damper shaft, use the mounting bracket and screws included in the delivery package.

Self-Centering Shaft Adapter

The self-centering shaft adapter can be used for shafts having various diameters (10...27 mm [3/8...1-1/16"]) and shapes (square or round). In the case of short shafts, the shaft adapter may be reversed and mounted on the duct side.

Stroke Limitation with Mechanical End Limits

The mechanical end limits enable the stroke to be limited from 0...90° in increments of 5°.

Wiring

Connecting to the Power Supply

In order to comply with protection class II, the power source of 24 V actuators must be reliably separated from the network power supply circuits as per DIN VDE 0106, part 101.

Access Cover

To facilitate wiring the actuator to the controller, the access cover can be detached from the actuator.

! IMPORTANT

Remove power before detaching the access cover. Once the access cover has been removed, please take care to avoid damaging any of the parts now accessible.

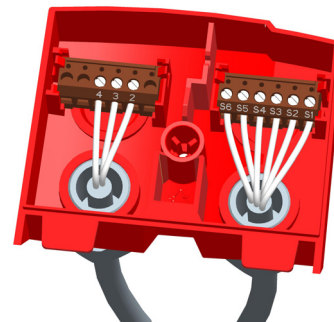


Fig. 8. Access cover (models with internal end switches)

Depending upon the model, the access cover may have one or two terminal strips, including a layout with a description for each of the terminals.

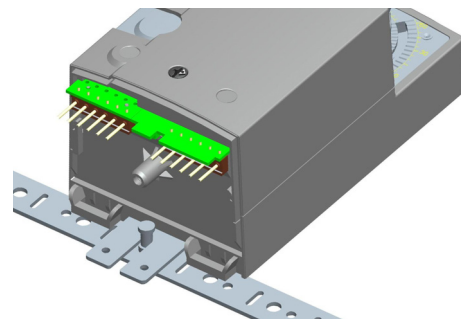


Fig. 9. Actuator with access cover removed (models with internal end switches)

Wiring Diagrams

A1: Wired for FLOATING	A2: Wired for ON/OFF	A3: Internal end switches (-SW2 models, only)
<p>* FOR N2024/N3424, ONLY **FOR N20230/N34230, ONLY</p>	<p>* FOR N2024/N3424, ONLY **FOR N20230/N34230, ONLY</p>	<p>* S1 AND S4 MUST BE CONNECTED TO SAME POWER SOURCE.</p>

The two tables below summarize the information presented in the preceding wiring diagrams.

models	terminal	wiring	
		floating	2-position
N2024/N3424 supply and signal lines	2	common $\perp/-$	common $\perp/-$
	3	24 V $\sim/+$ (clockwise)	24 V $\sim/+$
	4	24 V $\sim/+$ (counterclockwise)	24 V $\sim/+$ control signal
N20230/N34230 supply and signal lines	2	common $\perp/-$	common $\perp/-$
	3	230 Vac (clockwise)	230 Vac
	4	230 Vac (counterclockwise)	230 Vac control signal

connecting cable		terminal	description
end switches (models with internal switches, only)	CCW (left) 5°	S1	common
		S2	normally closed
		S3	normally open
	CW (right) 85°	S4	common
		S5	normally closed
		S6	normally open


OPTIONAL ACCESSORIES

The following optional accessories are available.

Auxiliary Switch Kit

Order no.: SW2

The auxiliary switches are field-installable parts providing two SPDT freely-adjustable switches.

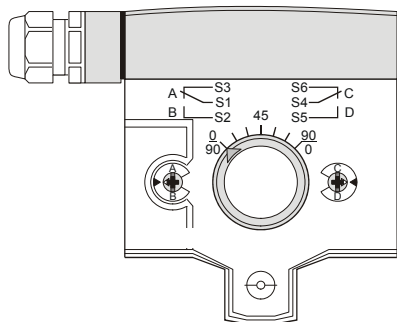

SPARE PARTS

Spare Parts Kit

Order no.: A7209.2071


The spare parts kit contains the following items:

- Anti-rotation bracket and screws
- Access cover screw
- Plastic protective cap for protection standard IP54
- Mechanical end limit screw and retainer


Anti-Rotation Bracket Kit

Order no.: A7209.2073

The anti-rotation bracket kit can be ordered separately.

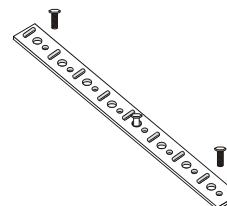

DIMENSIONS

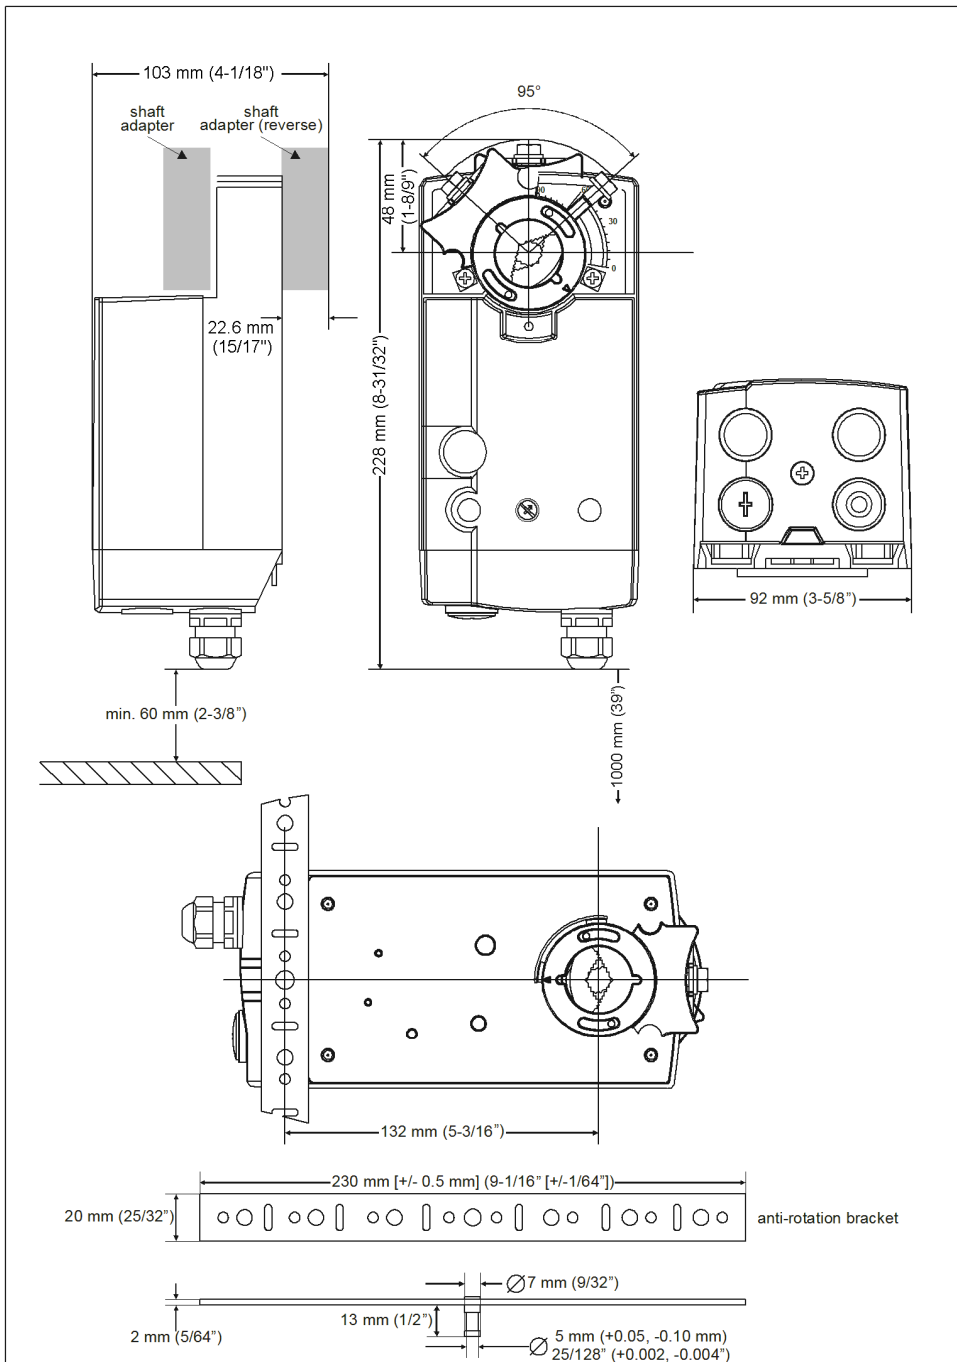

Honeywell

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Rolle, Z.A. La Pièce 16, Switzerland by its Authorized Representative:

Automation and Control Solutions

Honeywell GmbH
 Böblinger Strasse 17
 71101 Schönaich / Germany
 Phone: (49) 7031 63701
 Fax: (49) 7031 637493
<http://ecc.emea.honeywell.com>

Subject to change without notice. Printed in Germany

EN0B-0320GE51 R0511