

AQS series

AQS31/41 CO₂ Transmitter

PRODUCT DATA



Specifications

CO₂ Sensor: NDIR
Measurement Range: 0~ 3000 ppm
Signal Output: 4~20mA , 2~10VDC
Mod-bus RTU
Accuracy: ±30ppm ±5% of measured
value at 25°C

Relay contact setting: 800 ppm & 1000 ppm
Relay output: isolated N.O. & N.C.,
2A,30V up to 0.5A, 125V dc/ac.
Power Supply: 24 VAC/VDC ±10%
Current Output Load: 500 Ohm Max
Working temperature:
Room type -10°C ~ +70°C
Duct type -10°C ~ +70°C
5% ~ 95% RH without condensation

Certification:  Report No.HA130214-SBCE

Housing Material: Plastic (ABS)
Flame retarded acc. to UL94-V1

Protection Standard:
Room type IP30
Duct type IP65
Calibration: Factory calibrated

Application

CO₂ series transmitters are designed for use with building automation, energy management, and computer / monitoring systems.

These sensors can be used for HVAC system, hospitals, greenhouse, food storage, and incubators.

Features

- State-of-the-art Non-Dispersion-Infrared (NDIR) technology to measure carbon dioxide gas
- 4~20 mA, / 2~10 VDC output selectable
- Mod-bus and relay output built in
- LCD display option for both Space / Duct
- CO₂ range is selectable by jumper
- High reliability & accuracy
- Relay output range can adjust by mod-bus
- Rapid response



Model Selection

AQS31	Space CO2 Transmitter, 4~20mA / 2~10V + Mod-bus + Relay
AQS31-KAM	Duct CO2 Transmitter, 4~20mA / 2~10V + Mod-bus + Relay
AQS41	Space CO2 Transmitter with LCD, 4~20mA / 2~10V + Mod-bus + Relay
AQS41-KAM	Duct CO2 Transmitter with LCD, 4~20mA / 2~10V + Mod-bus + Relay



Appearance and Dimension (Dimension in mm)

Space mount Transmitter


1

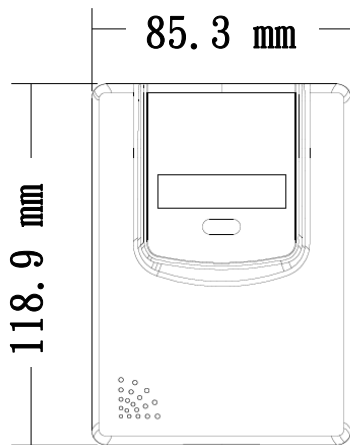


Duct mount Transmitter

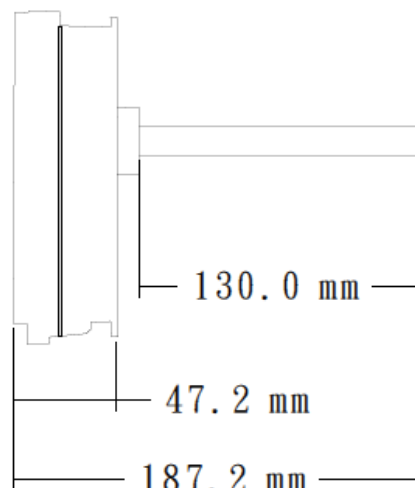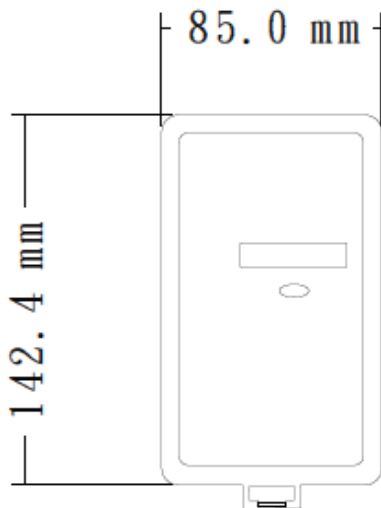


Wiring

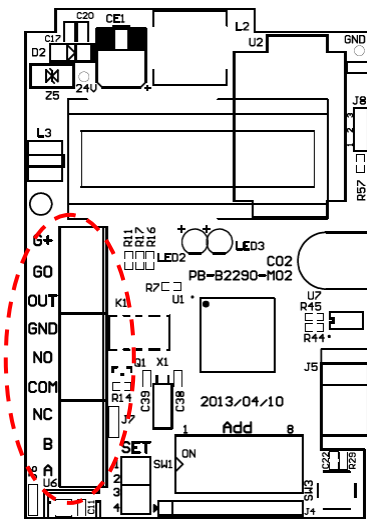

Connecting to AC24V

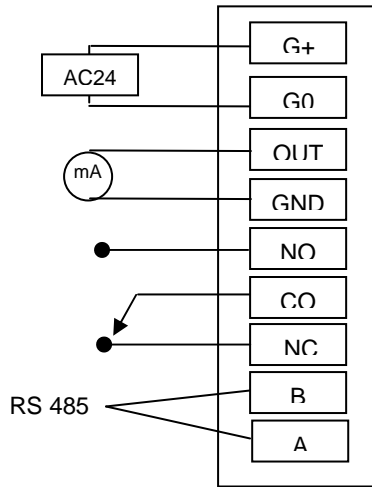


Connecting to DC24V

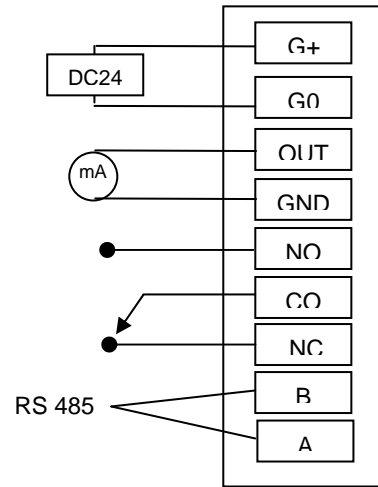

1.	G+	AC/DC 10~36V
2.	G0	System GND
3.	OUT	4~2mA / 2~10V
4.	GND	Singal GND
5.	NO	Normally opened
6.	COM	Com
7.	NC	Normally closed
8.	B	RS485 B(-)
9.	A	RS485 A(+)

CO2 Range Selection

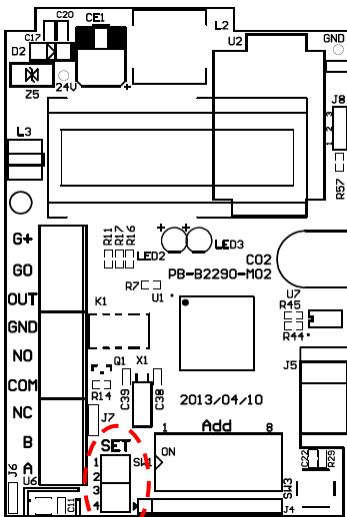

Jumper setting

1. Relay contact setting :

- set 0: pre-set at 800 ppm with hysteresis of 100 ppm.
- set 1: pre-set at 1,000 ppm with hysteresis of 100 ppm.


Relay Output	JP2	JP1
Relay contact setting 800 ppm	1	
Relay contact setting 1000 ppm	0	
Arbitrary density setting mode	X	1

2. JP3 are used to select 2000 ppm / 3000 ppm range


CO2 Range	JP3
setting 2000 ppm	1
setting 3000 ppm	0

3. JP8 are used to select 4~20mA / 2~10v linear outputs mode.

Output Configurations	JP8
4~20 mA	
2~10 V	

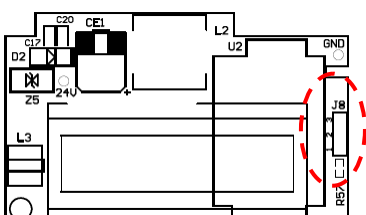

Device ID Selection

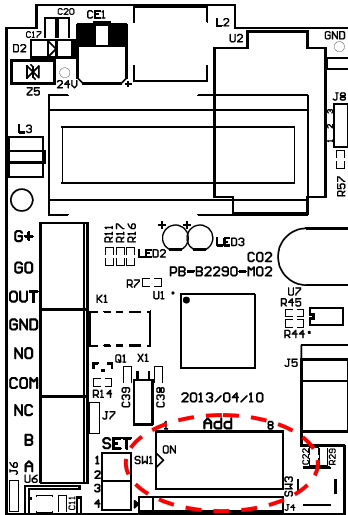

Device ID (ON = 1 , OFF = 0)					
1	1000 0000		165	1010 0101	
2	0100 0000		195	1100 0011	
		.		.	
55	1110 1100		197	1010 0011	
100	0010 0110		200	00010011	
		.		.	
125	1011 1110		254	0111 1111	
127	1111 1110		255	1111 1111	

Protocol

Baud Rate = 9600 · Word Length = 8 · Parity = none · Stop Bits = 1 °

Data Reading Type

	Device ID	Function	Address	Data Length	Error Check
CO2 ppm	01	04	0001	0001	XXXX

Responding Data Type

	Device ID	Function	Data byte	CO2 ppm	Error Check
CO2 ppm	01	04	02	02DC	XXXX

**** Remark 1 :**

XXXX is the CRC16 checksum (**Check Sum**) °

**** Remark 2 :**

CO2 resulting data in hex.

The resulting data is 0x02DC into decimal, ie 732 ppm.


To open the wall mounted housing

Figure 1. . Closed housing seen from above. The housing is opened by pressing a screw driver into the lock opening slot. .



Figure 2. .By pressing a flat screw-driver into the opening slot, the two locking hook would be released.




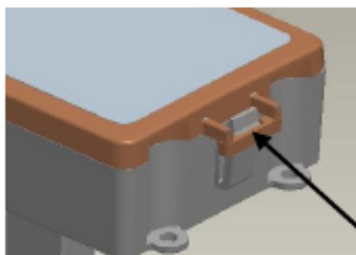

To open the duct mounted housing

Figure 1. . Closed housing seen from above. The housing is opened by pressing on the locking hook. The locking hook is then released.

Press here to open

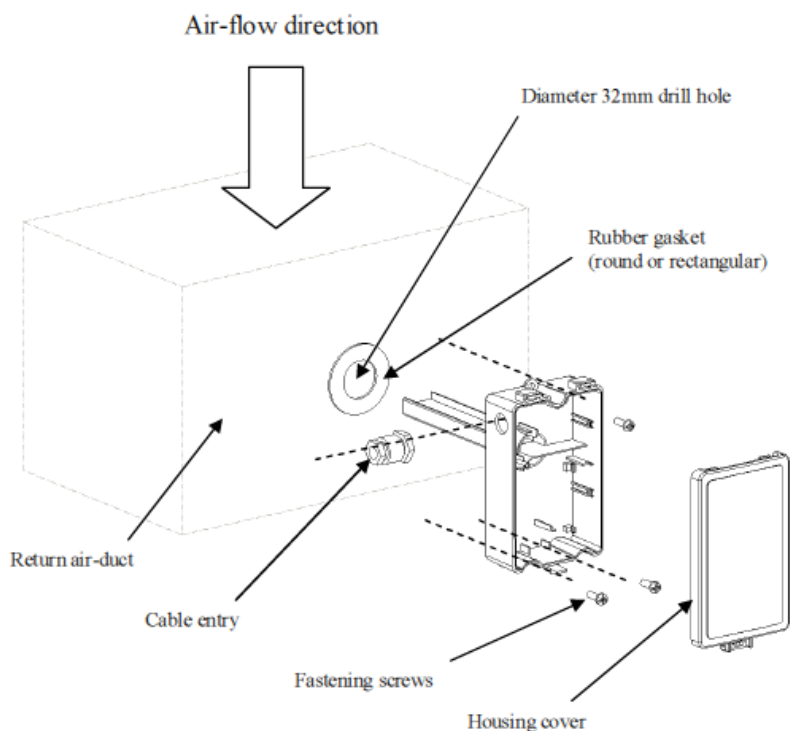

INSTALLATION GUIDE FOR DUCT MOUNT SENSOR OR TRANSMITTER :

- Drilling a mounting hole with diameter 13mm on the duct near measuring point. Insert the probe pipe into duct.
- Unscrew & open the front cover of the product.
- Use enclosed screws to install the wiring box on the duct.
- Lead wire from DDC or PLC panel through opening by using a properly sized screw driver to connect each wire to the terminals of the transducer module according to field wiring diagram.
- Put front cover back and tighten front cover by screw.
- Use a properly sized screw driver to connect the lead wires to the terminals.

INSTALLATION GUIDE FOR WALL MOUNT SENSOR OR TRANSMITTER :

- Remove the front cover and place the back panel to the desired location.
- Attaching the enclosed screws to the back panel.
- Place the front cover to the back panel.
- Keep the sensor or transmitter away direct sun light, heat source and cold source.
- The recommended location of wall mount sensor or transmitter is 1.5M above the ground.