



Room thermostat with LCD for wall mounting

RDG400

for VAV heating and cooling systems

- **Modulating PI control**
- **Control depending on the room or the return air temperature**
- **Output for DC 0...10 V actuator and auxiliary output ON/OFF, PWM or 3-position**
- **Automatic or manual heating / cooling changeover**
- **Operating modes: Comfort, Energy Saving and Protection**
- **3 multifunctional inputs for keycard contact, external sensor, etc.**
- **Adjustable commissioning and control parameters**
- **Minimum and maximum setpoint limitation**
- **Minimum and maximum limitation of air flow signal DC 0...10 V**
- **Output signal inversion as an option**
- **Operating voltage AC 24 V**
- **Backlit display**

Use

The room thermostat is designed for the following types of system:

VAV systems via ON/OFF or modulating control outputs:

- Single-duct system
- Single-duct system with electrical heater
- Single-duct system and radiator / floor heating
- Single-duct system with heating / cooling coil

Functions

- Room temperature control via built-in temperature sensor or external room temperature / return air temperature sensor
- Automatic or manual changeover between heating and cooling mode
- Selection of applications via DIP switches
- Selection of operating mode with operating mode button on the thermostat
- Display of current room temperature or setpoint in °C and/or °F
- Minimum and maximum setpoint limitation
- Button lock (automatic or manual)
- 3 multifunctional inputs, freely selectable for:
 - Operating mode switchover contact (keycard, window contact, etc.)
 - Changeover sensor for automatic heating / cooling mode
 - External room temperature or return air temperature
 - Dewpoint sensor
 - Electrical heater enable
 - Faults
- Minimum and maximum limitation of air flow signal DC 0...10 V
- Floor heating temperature limit
- Reload factory settings for commissioning and control parameters

Applications

The thermostat supports the following applications, which can be configured via DIP switches at the rear of the unit. The control output for the damper actuator is either DC 0...10 V (factory setting) or 3-position (see parameter P47), and for the auxiliary heating / cooling output ON/OFF, PWM, 3-position or DC 0...10 V.

Application		DIP switch	Control output
Single-duct <ul style="list-style-type: none"> • DC 0...10 V damper actuator • 3-position damper actuator 			DC 0...10 V
			3-position
Single-duct with auxiliary heater <ul style="list-style-type: none"> • DC 0...10 V damper actuator and ON/OFF, PWM or 3-position auxiliary heater • 3-position damper actuator and DC 0...10 V auxiliary heater 			DC 0...10 V
			ON/OFF, PWM or 3-position
Single-duct and radiator / floor heating <ul style="list-style-type: none"> • DC 0...10 V damper actuator and ON/OFF, PWM or 3-position radiator • 3-position damper actuator and DC 0...10 V radiator 			DC 0...10 V
			ON/OFF, PWM or 3-position
Single-duct heating and cooling coil <ul style="list-style-type: none"> • DC 0...10 V damper actuator and ON/OFF, PWM or 3-position heating and cooling • 3-position damper actuator and DC 0...10 V heating and cooling 			DC 0...10 V
			ON/OFF, PWM or 3-position

Type summary

Product no.	Operating voltage	Number of control outputs			
		ON/OFF	PWM	3-pos	DC 0...10 V
RDG400	AC 24 V	1 ¹⁾	1 ¹⁾	1 ¹⁾	1

1) ON/OFF, 3-position or PWM

Equipment combinations

Type of unit		Type reference	Data Sheet
DC 0..10 V actuator	Cable temperature sensor	 QAH11.1	1840
	Room temperature sensor	 QAA32	1747
	Condensation detector / Supply unit	 QXA2000 / AQX2000	1542
	Electrical actuator, DC 0..10 V (for radiator valve)	 SSA61...	4893
	Electrical actuator, DC 0..10 V (for 2 and 3 port valves / V...P45)	 SSC61...	4895
	Electrical actuator, DC 0..10 V (for small valve 2,5 mm)	 SSP61...	4864
	Electrical actuator, DC 0..10 V (for small valves 5.5 mm)	 SSB61...	4891
	Electrical actuator, DC 0..10 V (for Combi-valve VPI45)	 SSD61...	4861
	Thermal actuator, DC 0..10 V (for small valves and radiator valves)	 STS61	4880
	DC 0...10 V damper actuator	 GQD161...	4605
		GDB161...	4634
		GLB161...	
		GMA161...	4614
		GEB161...	4621
			GCA161...
GBB161...			4626
GIB161...			
VAV compact controller		GDB181.1E/3	3544
		GLB181.1E/3	
ON/OFF actuators AC 24 V	Electromotoric ON/OFF valve and actuator (only available in AP, UAE, SA and IN)	 MVI.../MXI...	4867
	Electromotoric ON/OFF actuator	 SFA71...	4863
	Thermal actuator (for radiator valve)	 STA71...	4877

3-position actuators
AC 24 V

Thermal actuator (for small valves 2.5 mm)		STP71...	4878
Electrical actuator, 3-position (for radiator valve)		SSA81...	4893
Electrical actuator, 3-position (for small valve 2.5 mm)		SSP81...	4864
Electrical actuator, 3-position (for small valve 5.5 mm)		SSB81...	4891
Electrical actuator, 3-position (for Combi-valve VPI45)		SSD81...	4861
Electromotoric actuator, 3-position (for valves 5.5 mm)		SQS85...	4573

Accessories

Description	Product no.	Data Sheet
Changeover mounting kit (50 pcs / package)	ARG86.3	1840
Adapter plate 120 x 120 mm for 4" x 4" conduit boxes	ARG70	
Adapter plate 112 x 130 mm for surface wiring	ARG70.2	

Ordering

When ordering, please indicate product no. and description:

E.g. **RDG400 room thermostat**

Order valve actuators separately.


Mechanical design

The room thermostat consists of 2 parts:

- Plastic housing which accommodates the electronics, the operating elements and the room temperature sensor
- Mounting plate with the screw terminals


The housing engages in the mounting plate and is secured with 2 screws.

Operation and settings

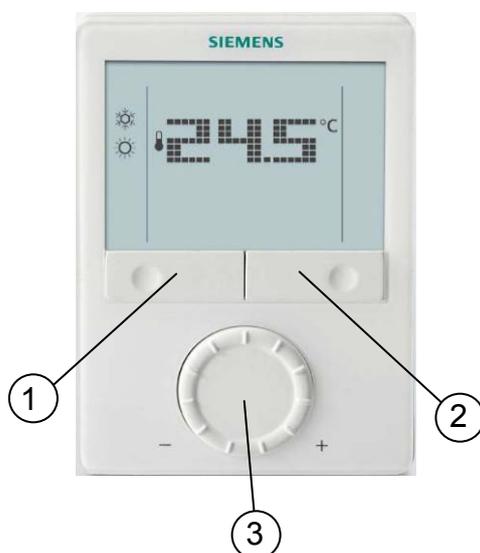

1. Operating mode selector / Esc
2. Protection and Ok
3. Rotary knob for setpoint and parameter adjustment


Display

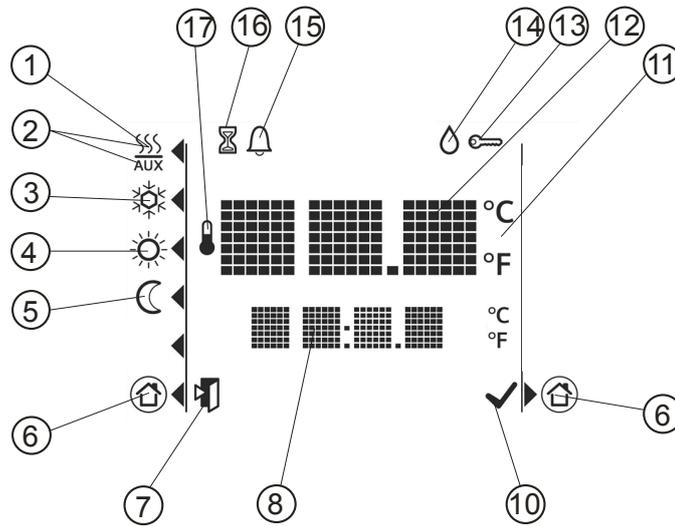

#	Symbol	Description	#	Symbol	Description
1		Heating mode	10		Confirmation of parameters
2		Heating mode auxiliary heater on (2 nd stage)	11		Degrees Celsius Degrees Fahrenheit
3		Cooling mode	12		Digits for room temperature and setpoint
4		Comfort mode	13		Button lock active
5		Energy Saving mode	14		Condensation in room (dewpoint sensor active)
6		Protection	15		Fault
7		Escape	16		Temporary timer function (visible when operating mode is temporarily extended due to prolonged presence or absence)
8		Digits for room temperature, setpoint, etc.	17		Indicates that room temperature is displayed

Mounting and installation

Do not mount on a wall in niches or bookshelves, behind curtains, above or near heat sources, or exposed to direct solar radiation. Mount about 1.5 m above the floor.

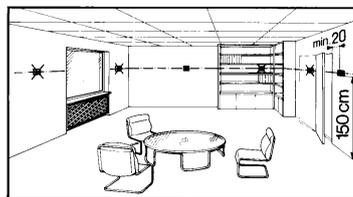

Mounting



- The room thermostat must be mounted in a clean, dry indoor place and must not be exposed to drip or splash water

Wiring



See Mounting Instructions (M3182) enclosed with the thermostat.



- Comply with local regulations to wire, fuse and earth the thermostat
- The power supply line must have an external fuse or circuit breaker with a rated current of no more than 10 A
- Inputs X1-M, X2-M or D1-GND of different units (e.g. summer / winter switch) may be connected in parallel with an external switch. Consider overall maximum contact sensing current for switch rating
- Disconnect power supply before removing the thermostat from the mounting plate!

Commissioning

Select the application and type of control output via the DIP switches before fitting the thermostat to the mounting plate.

After power is applied, the thermostat carries out a reset during which all LCD segments flash, indicating that the reset was correct. After the reset, which takes about 3 seconds, the thermostat is ready for commissioning by qualified HVAC staff. The control parameters of the thermostat can be set to ensure optimum performance of the entire system (see Basic Documentation P3182).

Control sequence

- The control sequence may need to be set via parameter P01 depending on the application. The factory setting for the single-duct application is “Cooling only”

Calibrate sensor

- Recalibrate the temperature sensor if the room temperature displayed on the thermostat does not match the room temperature measured. To do this, change parameter P05

Setpoint and setpoint range limitation

- We recommend to review the setpoints and setpoint ranges (parameters P08...P12) and change them as needed to achieve maximum comfort and save energy

Disposal




The device is classified as waste electronic equipment in terms of the European Directive 2002/96/EC (WEEE) and should not be disposed of as unsorted municipal waste. The relevant national legal rules are to be adhered to. Regarding disposal, use the systems setup for collecting electronic waste. Observe all local and applicable laws.

Technical data

⚠ Power supply	Operating voltage	SELV AC 24 V ±20%	
	Frequency	50/60 Hz	
	Power consumption	Max. 2 VA	
Outputs	Control output Y10-G0	DC 0...10 V	
	Resolution	39 mV	
	Current	Max. ±1 mA	
	Control output Y1, Y2-G	AC 24 V	
Inputs	Rating	Max. 1 A	
	Multifunctional inputs	X1-M / X2-M	
	Temperature sensor input	Type	
		QAH11.1 (NTC)	
	Digital input	Operating action	
		Selectable (NO/NC)	
		Contact sensing	
		DC 0...5 V, max. 5 mA	
	D1-GND	Operating action	
		Selectable (NO/NC)	
	Contact sensing		
	SELV DC 6...15 V, 3...6 mA		
Operational data	Function input	Selectable	
	External temperature sensor, changeover sensor, operating mode switchover contact, dewpoint monitor contact, enable electrical heater contact, fault contact		
	Switching differential, adjustable		
	Heating mode	(P30)	2 K (0.5...6 K)
	Cooling mode	(P31)	1 K (0.5...6 K)
	Setpoint setting and range		
	☀ Comfort mode	(P08)	21 °C (5...40 °C)
	⌚ Energy Saving mode	(P11-P12)	15 °C/30 °C (OFF, 5...40 °C)
	🏠 Protection	(P65-P66)	8 °C/OFF (OFF, 5...40 °C)
	Multifunctional inputs X1 / X2 / D1	Selectable	
Input X1	Ext. temperature sensor (P38=1)		
Input X2	Changeover sensor (P40=2)		
Input D1	Operating mode switchover (P42=3)		
Built-in room temperature sensor			
Measuring range	0...49 °C		
Accuracy at 25 °C	< ± 0.5 K		
Temperature calibration range	± 3.0 K		
Settings and display resolution			
Setpoints	0.5 °C		
Current temperature value displayed	0.5 °C		

Environmental conditions	Operation	As per IEC 721-3-3
	Climatic conditions	Class 3K5
	Temperature	0...50 °C
	Humidity	<95% r.h.
	Transport	As per IEC 721-3-2
	Climatic conditions	Class 2K3
	Temperature	-25... 60 °C
	Humidity	<95% r.h.
	Mechanical conditions	Class 2M2
	Storage	As per IEC 721-3-1
Climatic conditions	Class 1K3	
Temperature	-25... 60 °C	
Humidity	<95% r.h.	
Standards	CE conformity	
	EMC directive	2004/108/EC
	C ^{N474} C-tick conformity to EMC emission standard	AS/NSZ 4251.1:1999
	 Reduction of hazardous substances	2002/95/EC
	Product standards	
	Automatic electrical controls for household and similar use	As per EN 60730-1
	Special requirements for temperature-dependent controls	As per EN 60730-2-9
	Electronic control type	2.B (micro-disconnection on operation)
	Electromagnetic compatibility	
	Emissions	As per IEC/EN 61000-6-3
Immunity	As per IEC/EN 61000-6-2	
Safety class	III as per EN 60730	
Pollution class	Normal	
Degree of protection of housing	IP30 as per EN 60529	
General	Connection terminals	Solid wires or prepared stranded wires 1 x 0.4...2.5 mm ² or 2 x 0.4...1.5 mm ²
	Housing front color	RAL 9003 white
	Weight	0.350 kg


Connection terminals

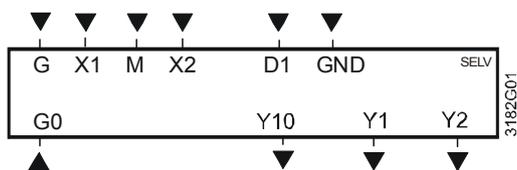

G, G0	Operating voltage AC 24 V
Y10/G0	Control output for DC 0...10 V actuator
Y1/G, Y2/G	Control output for 2-position, PWM or 3-position actuators
X1, X2	Multifunctional input for temperature sensor (e.g. QAH11.1) or potential-free switch Factory setting: - X1 = external room temperature sensor - X2 = sensor or switch for automatic heating / cooling changeover
M	Measuring neutral for sensor and switch
D1, GND	Multifunctional input for potential-free switch. Factory setting: Operating mode switchover contact

Connection diagrams

Application: Single-duct

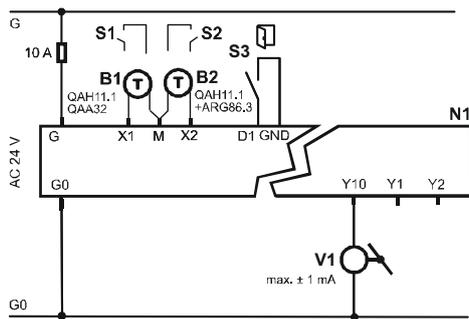


V1 DC 0...10 V damper actuator

N1 Room thermostat RDG400


S1..S3 Switch (keycard, window contact, etc.)

B1, B2 Temperature sensor (return air temperature, external room temperature, changeover sensor, etc.)

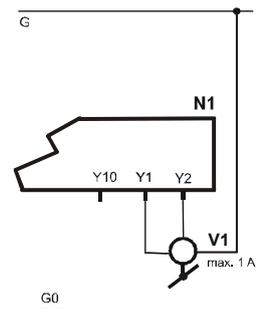

V1 3-position damper actuator

Application: Single-duct with electrical heater, radiator or heating / cooling

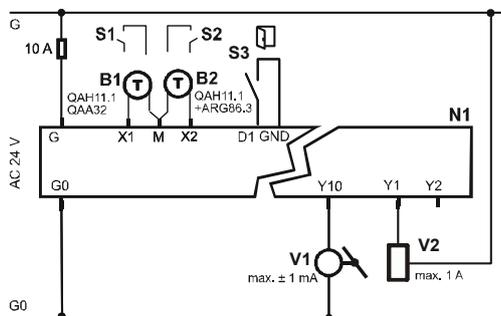


V1 DC 0...10 V damper actuator

V2 2-position or PWM electrical heater, radiator or heating / cooling valve

N1 Room thermostat RDG400


S1..S3 Switch (keycard, window contact, etc.)

B1, B2 Temperature sensor (return air temperature, external room temperature, changeover sensor, etc.)

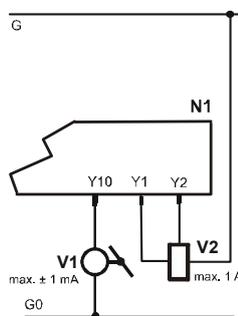

V1 DC 0...10 V damper actuator

V2 3-position electrical heater, radiator or heating / cooling valve

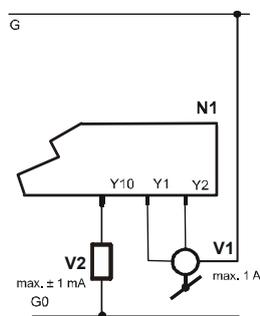

V1 3-position damper actuator

V2 DC 0...10 V electrical heater, radiator or heating / cooling valve

Dimensions

Dimensions in mm

